



# PORTABLE TRAFFIC LIGHT ONSITE QUICK START



**CAUTION:** THE DATA SIGN PORTABLE TRAFFIC LIGHTS SHOULD ONLY BE OPERATED BY QUALIFIED TRAFFIC MANAGERS. IF YOU HAVE HIRED OUT THIS PTL, CONTACT THE HIRE COMPANY FOR ASSISTANCE.



**CHECK: CAN YOU SEE THE OTHER LIGHT?  
LINE OF SIGHT IS REQUIRED.**

**BOTH LIGHTS MUST BE SET, USUALLY DO THE SUB PTL FIRST.**

Press and hold  to switch ON. Then press 

From the **Main Menu**, select **QUICK START** and press 



The Quick Start menu item is used to get your PTL Lights set up in a few simple steps:

- To set up each PTL, select  for Sub or  for MAIN controller and press 
- Select the RF Channel (1-8) or press  to keep current channel.
- Select **\* YES = OPERATION** 
- Enter the ROAD LENGTH.  
If you are setting the MAIN PTL, set the ROAD SPEED and GREEN TIME also.
- Finally, select Shuttle  or Plant Crossing  operation.

The current **MODE** setting is shown on the top display line in between the square brackets. i.e. [AUTO] as per above display screen.

- DEMAND** is Vehicle-actuated Mode. *Vehicle detectors MUST be fitted.*
- AUTO (TIMED)** is Automatic Timed Mode.
- MANUAL** is Manual Mode (using the  and  buttons or the PTL REMOTE).

*Note: If Lights are not operating as expected, from the MAIN MENU, select FACTORY RESET and then do the QUICK START again (this will reset all setting back to the default settings).*



**Video demonstrations.** Scan the QR code and select the appropriate video to watch.

